




## INSTALLATION INSTRUCTIONS

CK-6BP6060CH1	CK-6BP6060BN1	CK-6BP6060BC1
CK-6BP6060CH2	CK-6BP6060BN2	CK-6BP6060BC2
CK-6BP4872CH1	CK-6BP4872BN1	CK-6BP4872BC1
CK-6BP4872CH2	CK-6BP4872BN2	CK-6BP4872BC2
CK-6BP6072CH1	CK-6BP6072BN1	CK-6BP6072BC1
CK-6BP6072CH2	CK-6BP6072BN2	CK-6BP6072BC2

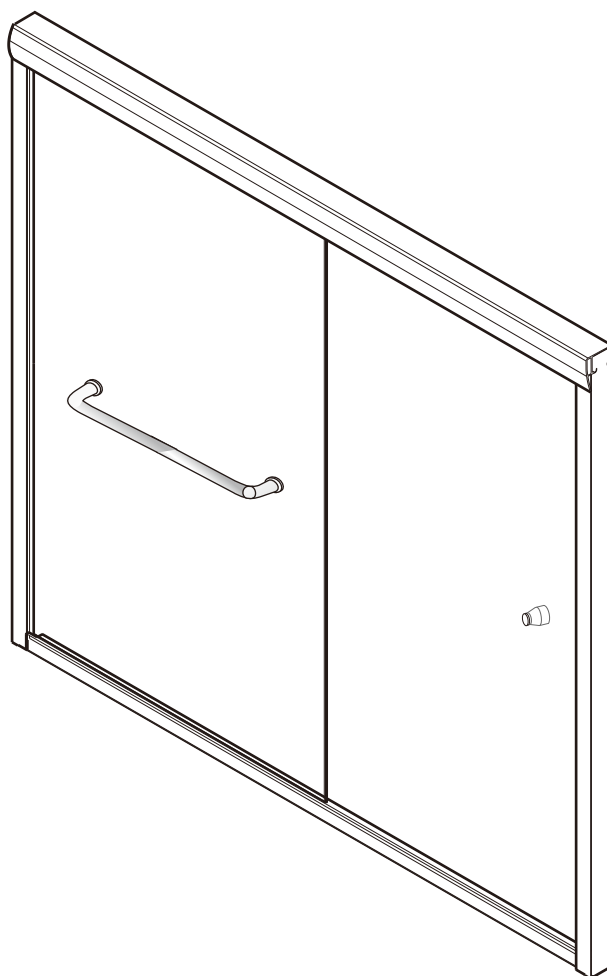

## ◆ General Information

Please inspect the product immediately upon receipt for transit damage, missing packs/parts or manufacturing fault. Damage reported later cannot be accepted. Please handle the product with care avoiding knocks and shock loading to all sides and edges of the glass.

### **Notes: Safety glass can not be re-worked.**

Please read these instructions carefully before start of installation.

Special care should be taken when drilling walls to avoid hidden pipes or electrical cables.

Note: This product is heavy and may require two people to install.

## **Aftercare instructions**


After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts may be deposited and allowed to build up. Cleaners of a gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals such as organic solvents and strippers.

Glass cleaners can be used but with caution, if in doubt contact the manufacturer of the cleaner in question.


Please keep these instructions for aftercare and customer service details.

---


## **Tools Required**

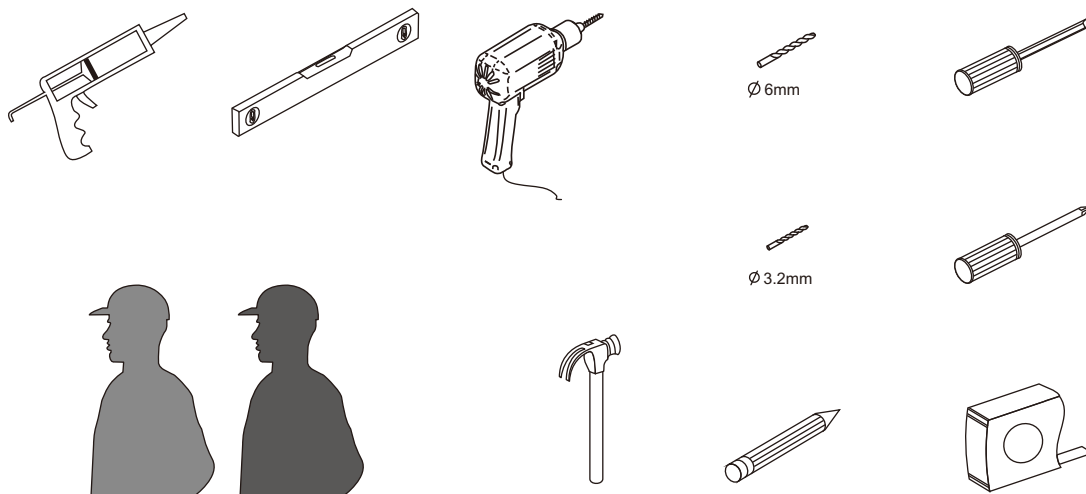

**This product is heavy and may require two people to install.**

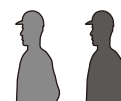



## ◆ Assembly Drawing

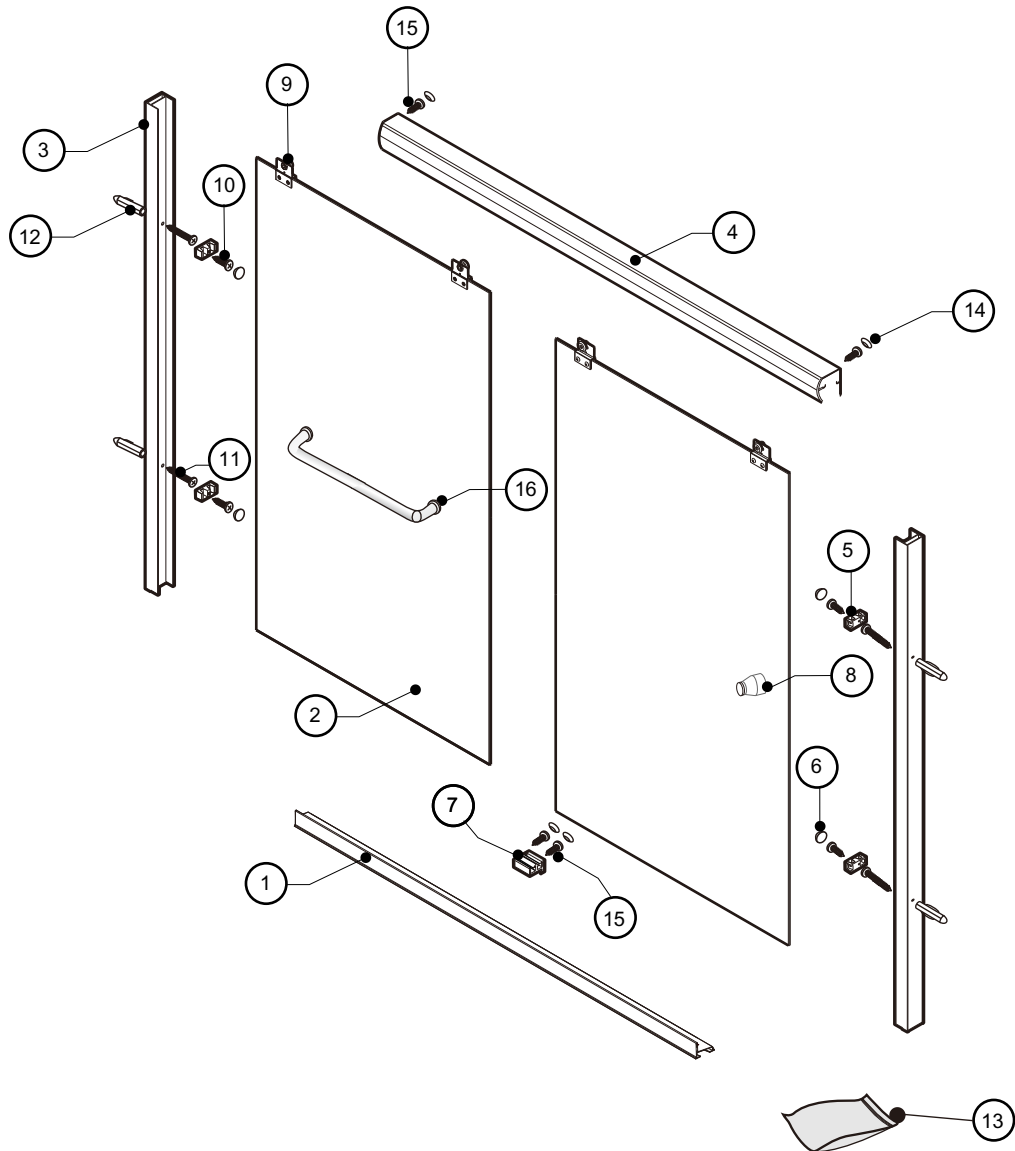



Item no.in exploded drawing picture	Description	Q'TY	Item no.in exploded drawing picture	Description	Q'TY
1	Bottom Horizontal Rail	1	9	Wheels	4
2	Door Panels	2	10	Screw M4x15	4
3	Wall Jambs	2	11	Screw M4x35	4
4	Top Horizontal Rail	1	12	Wall Plugs	4
5	Glass Blocks	4	13	Jubrication oil	1
6	Glass Block Caps	4	14	Fired Pael Screw Caps	4
7	Glass Tracks	1	15	Screw M4x8	4
8	Handle	1	16	Handle	1

## ◆ Installation Steps






### Step 1

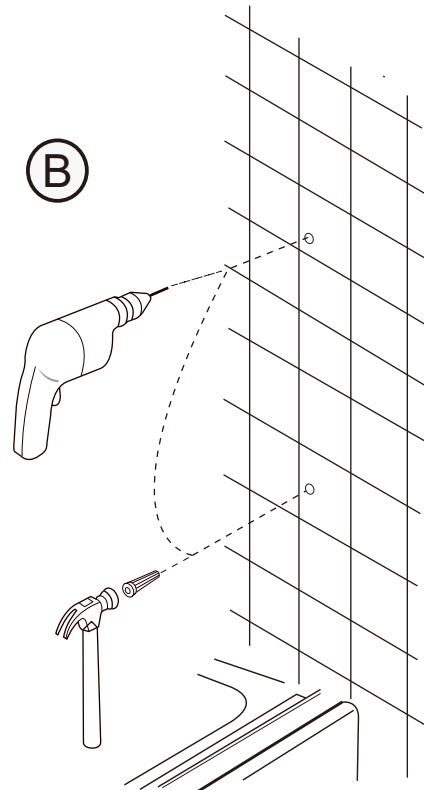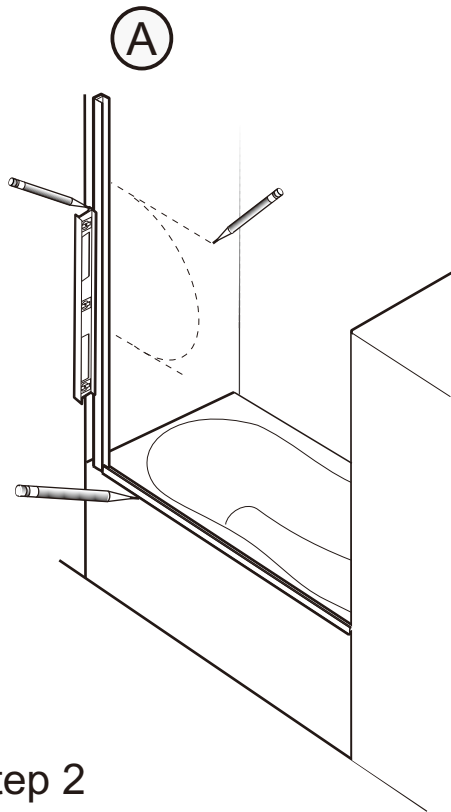




### Step 2

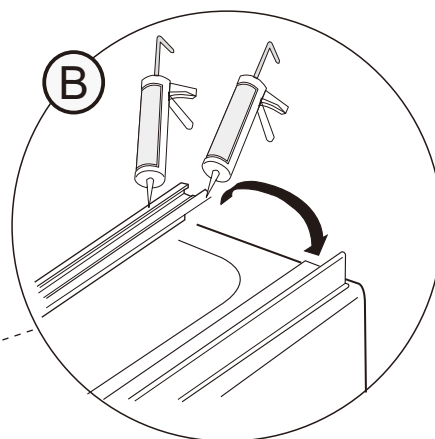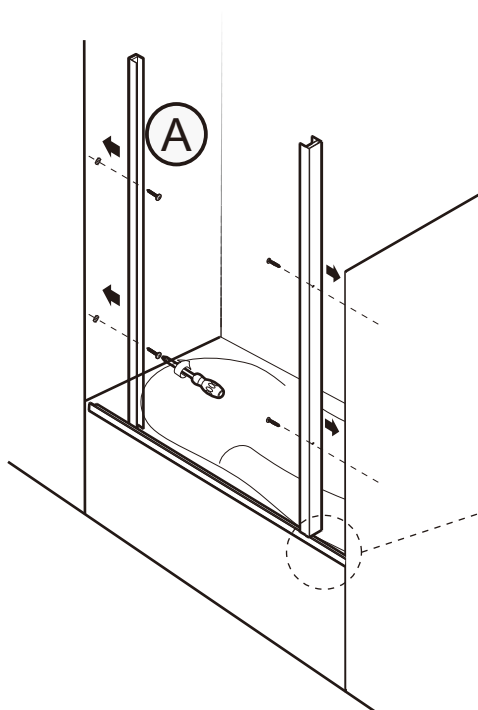







### Step 3

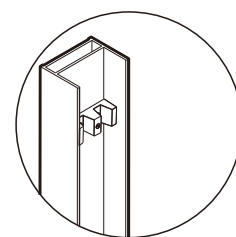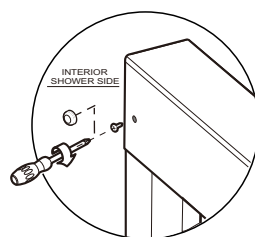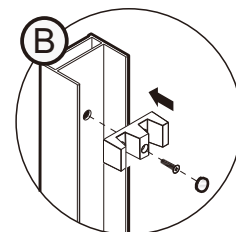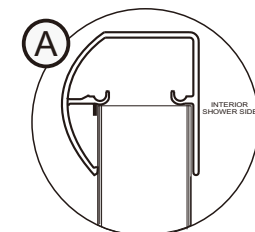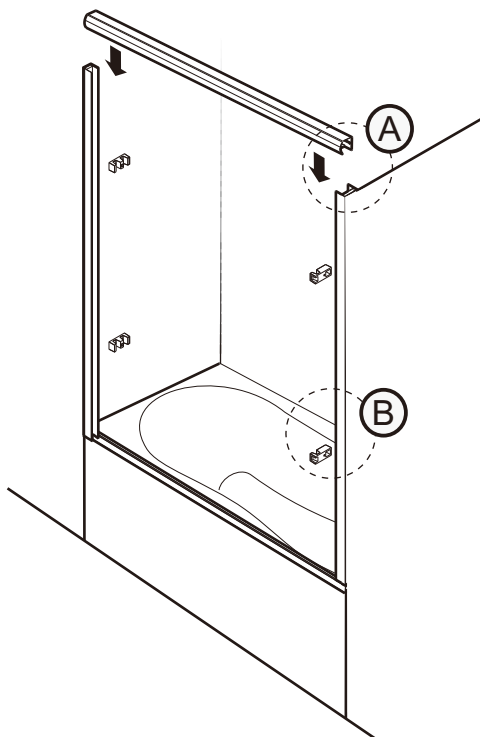





### Step 4

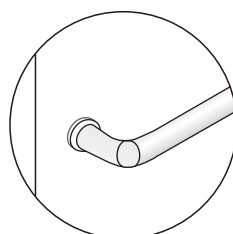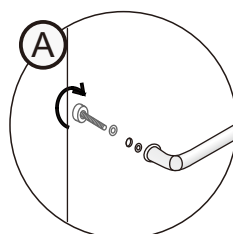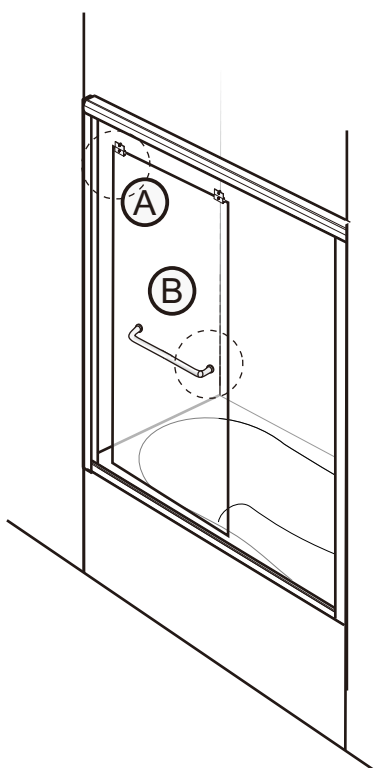


## Step 5

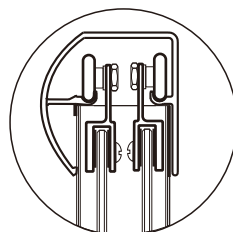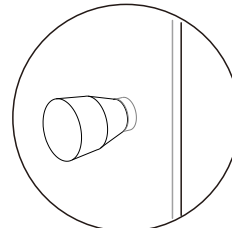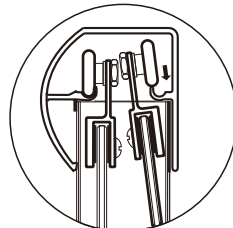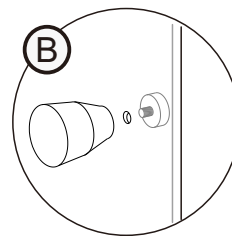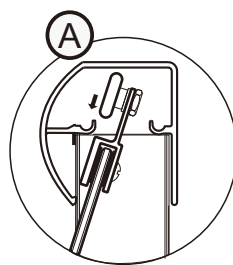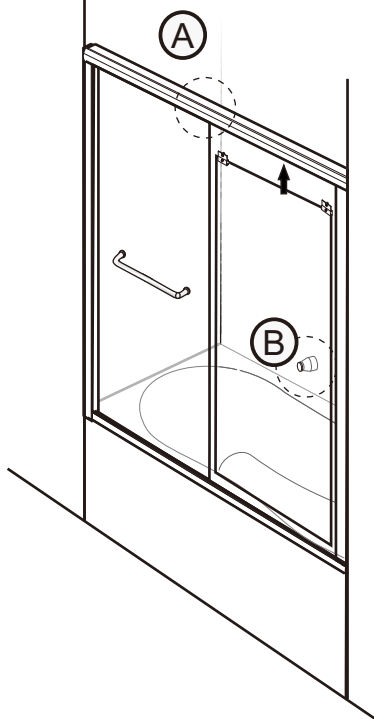

## Step 6

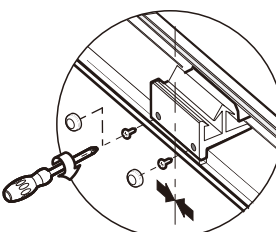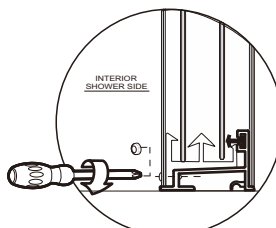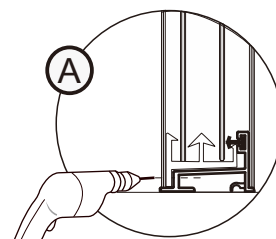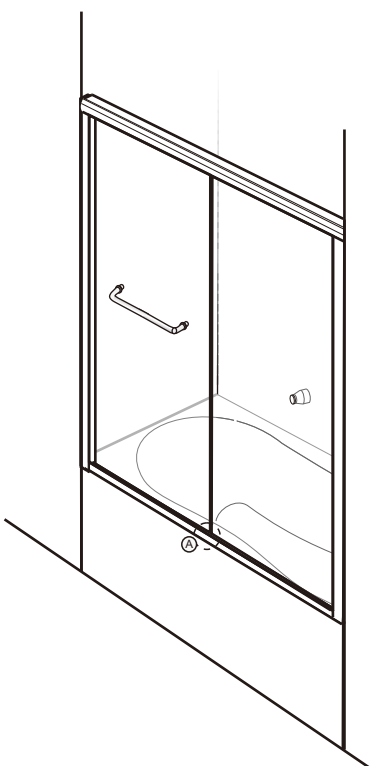

## Step 7

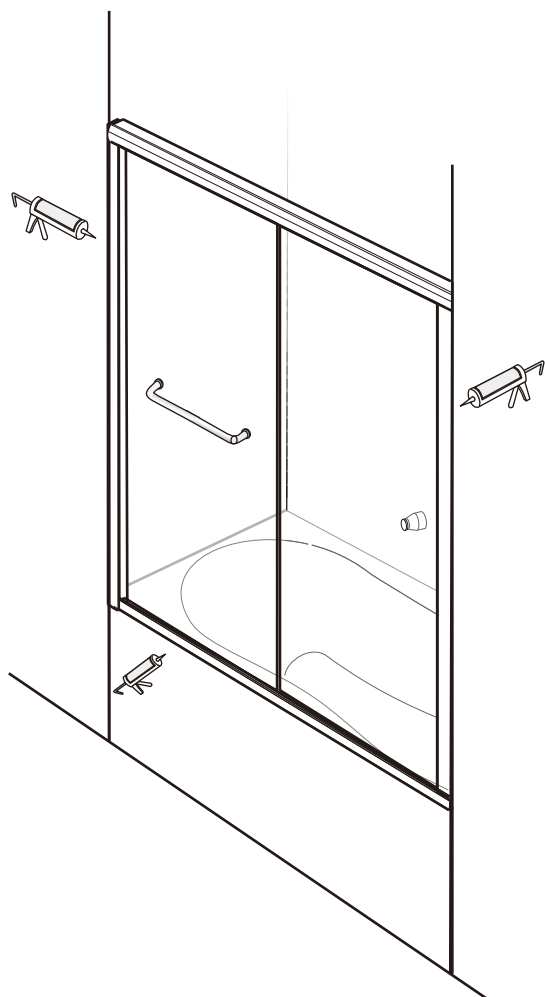

Allow 24 hours for silicone to dry before use.